





# Thule Rapid System Kit 1002

# > Instructions

**AUDI A6**, 4-dr Sedan, 94-97

**AUDI A6 Avant**, 5-dr Estate, 94-97

**AUDI 100**, 4-dr Sedan, 91-93

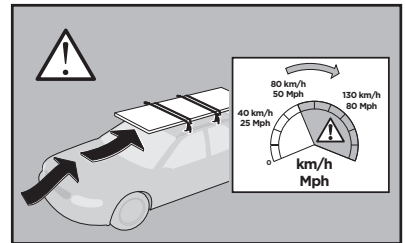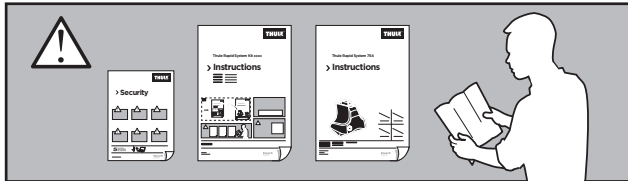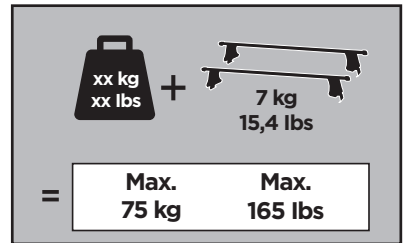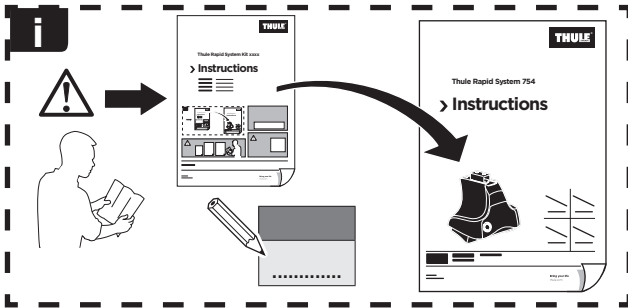



ISO 11154-E

**141002**


C.20130107  
519-1002-01

**Bring your life**

thule.com

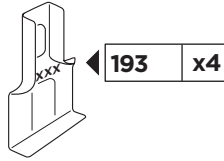



x1



x1

1

	X (scale)	X (mm)	X (inch)
<b>AUDI A6</b> , 4-dr Sedan, 94-97	31,5	966	38
<b>AUDI A6 Avant</b> , 5-dr Estate, 94-97	31,5	966	38
<b>AUDI 100</b> , 4-dr Sedan, 91-93	31,5	966	38

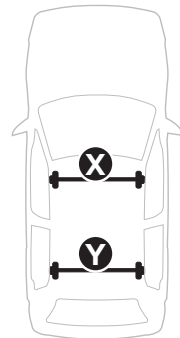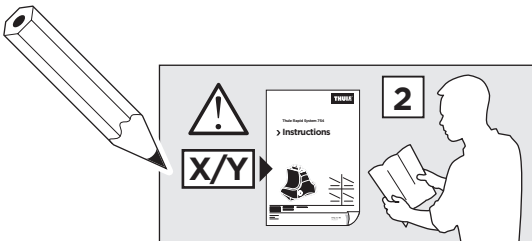



	Y (scale)	Y (mm)	Y (inch)
<b>AUDI A6</b> , 4-dr Sedan, 94-97	31	961	37 <sup>7</sup> / <sub>8</sub>
<b>AUDI A6 Avant</b> , 5-dr Estate, 94-97	31	961	37 <sup>7</sup> / <sub>8</sub>
<b>AUDI 100</b> , 4-dr Sedan, 91-93	31	961	37 <sup>7</sup> / <sub>8</sub>

**2**

**AUDI A6, 4-dr Sedan, 94-97**

**AUDI A6 Avant, 5-dr Estate, 94-97**

**AUDI 100, 4-dr Sedan, 91-93**

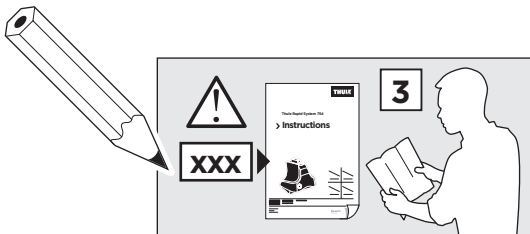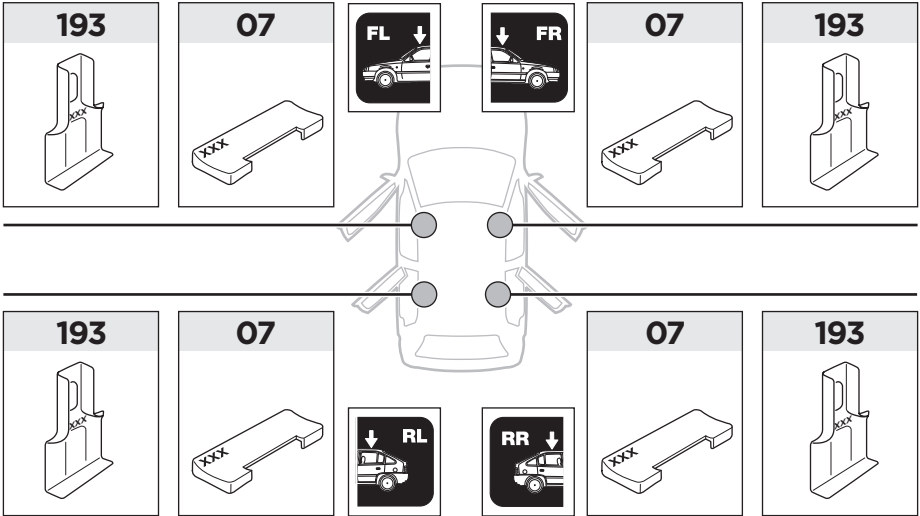

3

