

Thule Rapid System Kit 1020





> Instructions

BMW 5-Series, 4-dr Sedan, 96-00, 01-03 / *97-03

BMW 5-Series Touring, 5-dr Estate, 96-00, 01-03

BMW 5-Series, 5-dr Wagon, *97-03


*North America

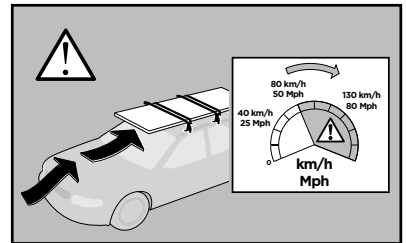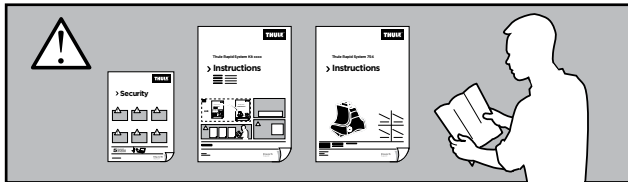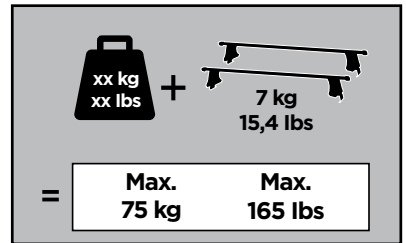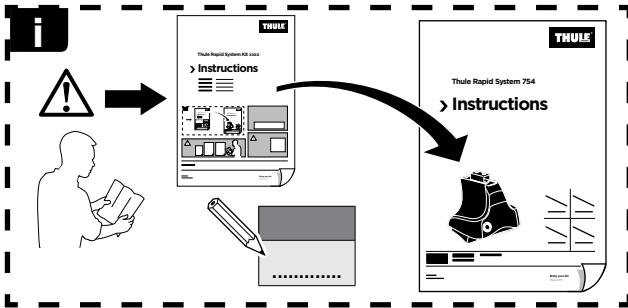

ISO 11154-E



15 x4




73 x2



75 x2





x1



x1

1

| | X (scale) | X (mm) | X (inch) |
|---|-------------|-------------|-----------|
| BMW 5-Series , 4-dr Sedan, 96-00, 01-03 / *97-03 | 36,5 | 1016 | 40 |
| BMW 5-Series Touring , 5-dr Estate, 96-00, 01-03 | 34 | 991 | 39 |
| BMW 5-Series , 5-dr Wagon, *97-03 | 34 | 991 | 39 |

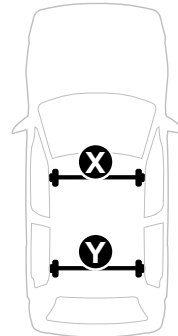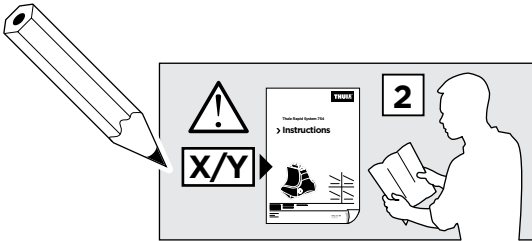



| | Y (scale) | Y (mm) | Y (inch) |
|---|-------------|------------|---------------|
| BMW 5-Series , 4-dr Sedan, 96-00, 01-03 / *97-03 | 33 | 981 | 39 5/8 |
| BMW 5-Series Touring , 5-dr Estate, 96-00, 01-03 | 30,5 | 956 | 37 5/8 |
| BMW 5-Series , 5-dr Wagon, *97-03 | 30,5 | 956 | 37 5/8 |

2


BMW 5-Series, 4-dr Sedan, 96-00, 01-03 / *97-03

BMW 5-Series Touring, 5-dr Estate, 96-00, 01-03

BMW 5-Series, 5-dr Wagon, *97-03

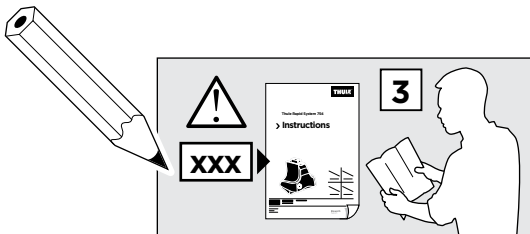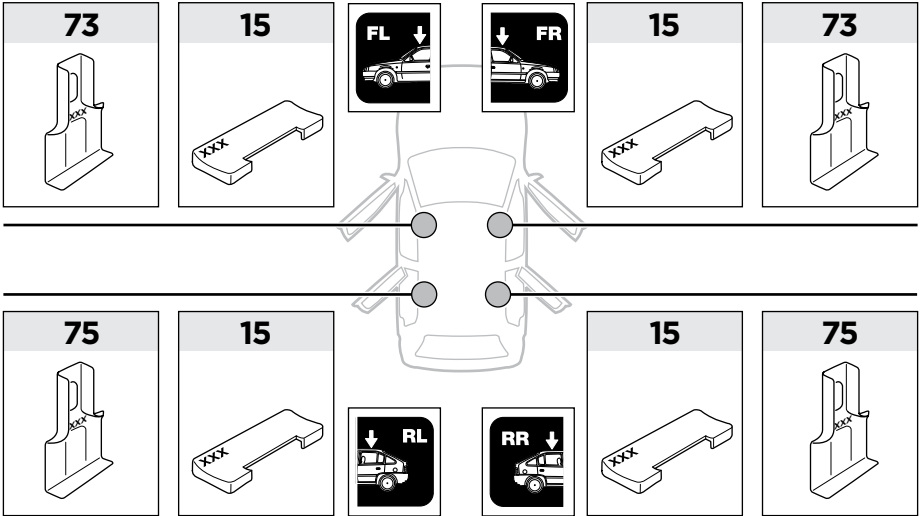

3

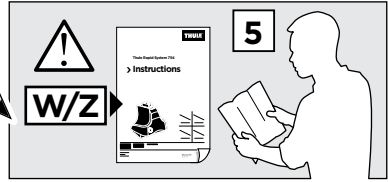

| | W (mm) | Z (mm) | W (inch) | Z (inch) |
|---|--------|--------|----------|----------|
| BMW 5-Series , 4-dr Sedan, 96-00, 01-03 / *97-03 | 190 | 690 | 7 1/2 | 27 1/8 |
| BMW 5-Series Touring , 5-dr Estate, 96-00, 01-03 | 480 | 700 | 18 7/8 | 27 1/2 |
| BMW 5-Series , 5-dr Wagon, *97-03 | 480 | 700 | 18 7/8 | 27 1/2 |

